



11
15
 D 50
 2/85

11 15		11/88										
Nr.	Teile-Nummer	Symbol	Benennung				D 35-1	D 35-2	D 50-1	D 50-2	Bemerkung	
1	11 271 1331 865		Welle / Shaft / Arbre / Axel / Albero						1	1		
2	07 119 919 004		VSL SHR M 10 × 1				2	2	2	2		
3	11 271 1331 867		Anlaufbüchse / Check bushing / Douille de butée / Starterbussning / Bussola di avviamento				2	2	2	2		
4	11 271 1331 868		33,3 O-Ring / O-ring / Joint torique / O-ring / Anello-O				2	2	2	2		
5	11 271 1331 856		Unwucht / Imbalance / Balourd / Motvikt / Sbilanciamento				1	1	1	1		
6	11 271 1331 864		Nadellager / Needle bearing / Roulement à aiguilles / Nällager / Cuscinetto a aghi				2	2	2	2		
7	11 271 1331 862		Mitnehmer / Driving dog / Entraîneur / Medbringare / Trascinatore				1	1	1	1		
8	07 119 919 728		ZYL SHR M 8 × 20				6	6	11	11		
9	07 119 933 096		8 Federring / Spring lock washer / Rondelle élastique / Fjäderbricka / Anello elastico				6	6	11	11		
10	11 271 1331 863		Mitnehmer / Driving dog / Entraîneur / Medbringare / Trascinatore						1	1		
11	11 271 1331 859		Zahnrad mit Unwucht / Gearwheel with imbalance / Pignon avec balourd / Kugghjul med motvikt / Ruota dentata con sbilanciamento				1	1	1	1		
12	07 119 922 078		6 KT MU M 8				2	2	2	2		
13	11 271 1331 869		Lasche / Shackle / Attache / Länk / Biscottino				1	1	1	1		
14	07 119 909 452		STI SHR M 8 × 12				2	2	2	2		
15	07 119 930 840		Federring / Spring lock washer / Rondelle élastique / Fjäderbricka / Anello elastico				2	2	2	2		